

16022500004263
WIRING DIAGRAM
(INDOOR UNIT)
FUNCTION OF SWITCH

SWITCH	FOR CCM UNIT ADDRESS
S2 + S1	0~15 16~31
Factory Setting	✓
S2 + S1	32~47 48~63
Factory Setting	✓


SW2 / SW2-1	SWITCH	FOR FAN MOTOR CONTROL (WITH NO POWER REQUEST)
ON	ON	ON
STATE	ON	ON
MODE	FAN OFF	FAN ON
Factory Setting	✓	
SW2-2	SWITCH	BREEZELESS
ON	ON	ON
STATE	ON	ON
MODE	BREEZE LESS OFF	BREEZE LESS ON
Factory Setting	✓	


Anti-cold air	
SW1	FAN MOTOR STOP-TEM
ON	24
STATE	Factory setting ✓
ON	15
ON	8
STATE	According to the EEPROM setting

NOTE:
 This symbol indicates the element is optional, the actual shape shall prevail.

FOR SETTING POWER(DC MOTOR MODEL ONLY)										
ENC1										
CODE	0	1	2	4	5	7	8	9	A	B
POWER	20	26	32~35	36~53	54~71	72~90	91~105	106~140	141~160	161~200
FACTORY SETTING	ACCORDING TO RELATED MODEL.									

SW3	SWITCH	FOR AUTO-RESTART SETTING		
ON:	ON	ON		
STATE	ON	ON		
MODE	REMEMBER	NO REMEMBER		
Factory Setting	✓			
SW7	SWITCH	FOR COOLING & HEATING OR COOLING ONLY SETTING		
ON:	ON	ON		
STATE	ON	ON		
MODE	COOLING	HEATING	COOLING ONLY	
Factory Setting	✓			
SW6	SWITCH	FOR TEMP. COMPENSATION		
ON:	ON	ON	ON	ON
STATE	ON	ON	ON	ON
VALUE	6	4	2	0 (factory)
Factory Setting	✓			
SW5	SWITCH	FOR MODE-PRIOR SETTING		
ON:	ON	ON	ON	ON
STATE	ON	ON	ON	ON
MODE	HEAT	HEAT	COOL	COOL
Factory Setting	✓			
SW8	SWITCH	FOR MAIN-SLAVE SETTING		
ON:	ON	ON	ON	ON
STATE	ON	ON	ON	ON
MODE	MAIN	NO SLAVE	MAIN	MAIN-SLAVE
Factory Setting	✓			

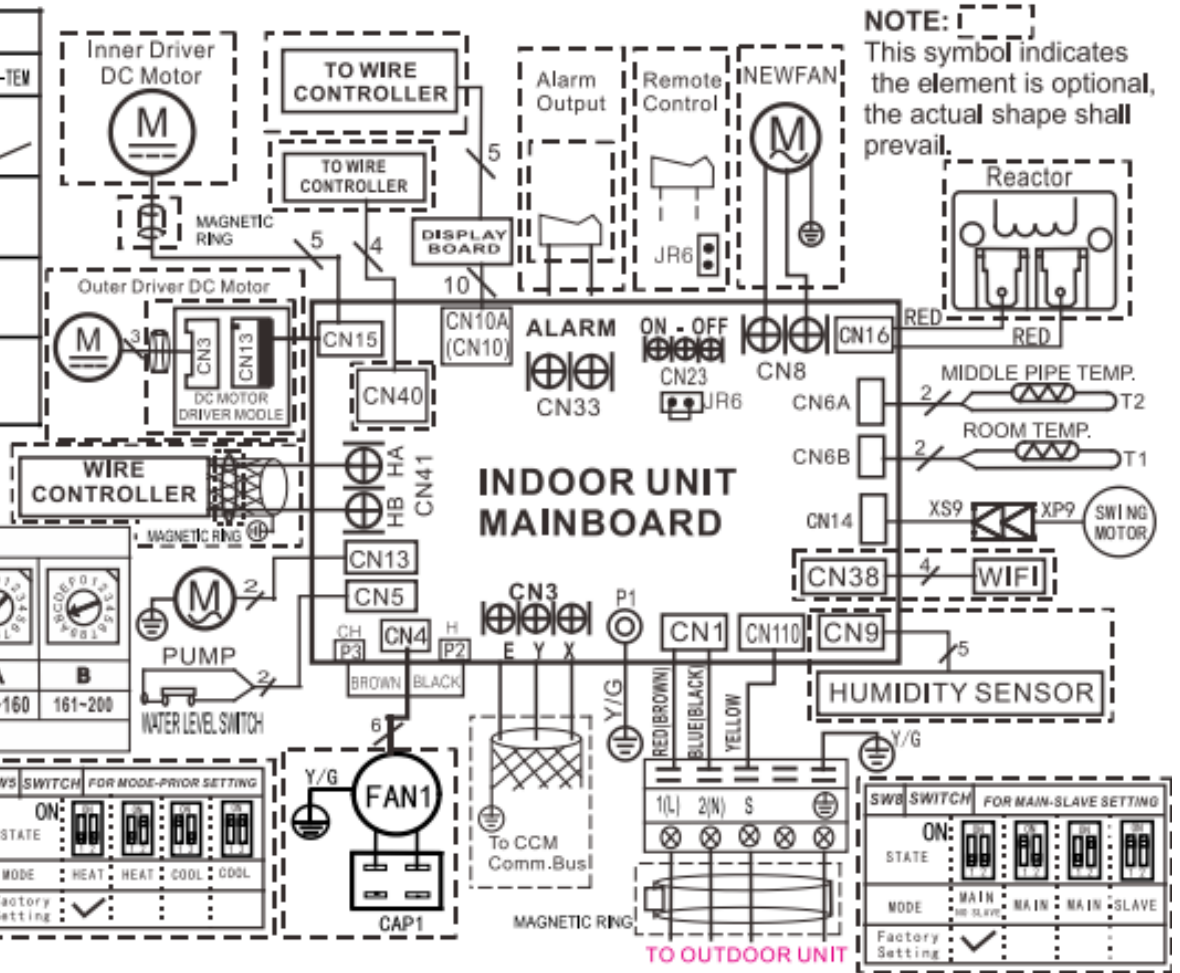

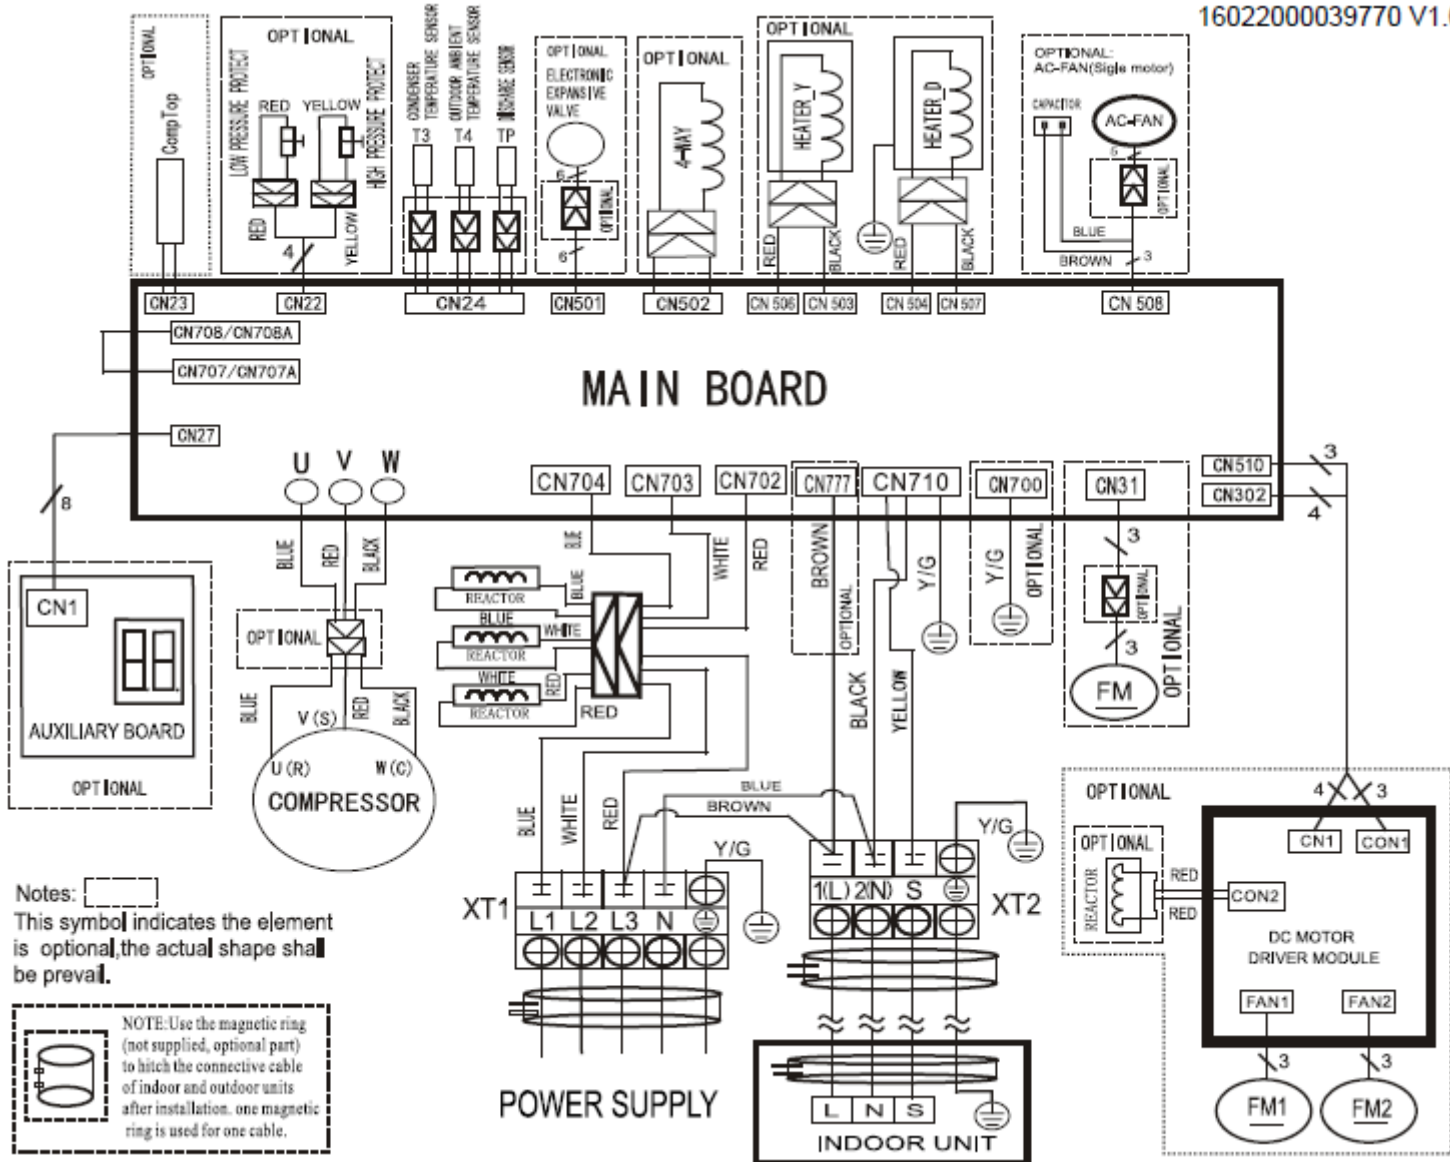

Model:	
	AOU-140HRDC3C
	Wiring diagram