

CODE:16022500006083
**WIRING DIAGRAM
 (INDOOR UNIT)**
FUNCTION OF SWITCH

SWITCH	FOR CCM UNIT ADDRESS	
S2 + S1		
ADDRESS	0~15	16~31
Factory Setting	✓	
S2 + S1		
ADDRESS	32~47	48~63
Factory Setting		✓

SW2 / SW2-1	SWITCH	FOR FAN MOTOR CONTROL THEN NO POWER REQUEST.
ON		
STATE	FAN OFF	FAN ON
MODE	FAN OFF	FAN ON
Factory Setting	✓	
SW2-2	SWITCH	BREEZELESS
ON		
STATE	BREEZE LESS OFF	BREEZE LESS ON
MODE	BREEZE LESS OFF	BREEZE LESS ON
Factory Setting	✓	

Anti-cold air	
SW1	FAN MOTOR STOP-TEM
ON	
STATE	24 Factory setting ✓
ON	
STATE	15
ON	
STATE	8
ON	
STATE	According to the EEPROM setting

FOR SETTING POWER(DC MOTOR MODEL ONLY)

ENC1											
CODE	0	1	2	4	5	7	8	9	A	B	
POWER	20	26	32~35	36~53	54~71	72~90	91~105	106~140	141~160	161~200	
FACTORY SETTING	ACCORDING TO RELATED MODEL.										


SW3	SWITCH	FOR AUTO-RESTART SETTING
ON		
STATE	REMEMBER	NO_REMEMBER
MODE	REMEMBER	NO_REMEMBER
Factory Setting	✓	

SW7	SWITCH	FOR COOLING & HEATING OR COOLING ONLY SETTING
ON		
STATE	COOLING + HEATING	COOLING ONLY
MODE	COOLING + HEATING	COOLING ONLY
Factory Setting	✓	

SW6	SWITCH	FOR TEMP. COMPENSATION
ON		
STATE	6	4
MODE	6	4
Factory Setting	✓	

SW5	SWITCH	FOR MODE-PRIOR SETTING
ON		
STATE	HEAT	HEAT
MODE	HEAT	HEAT
Factory Setting	✓	


SW8	SWITCH	FOR MAIN-SLAVE SETTING
ON		
STATE	MAIN	SLAVE
MODE	MAIN	SLAVE
Factory Setting	✓	

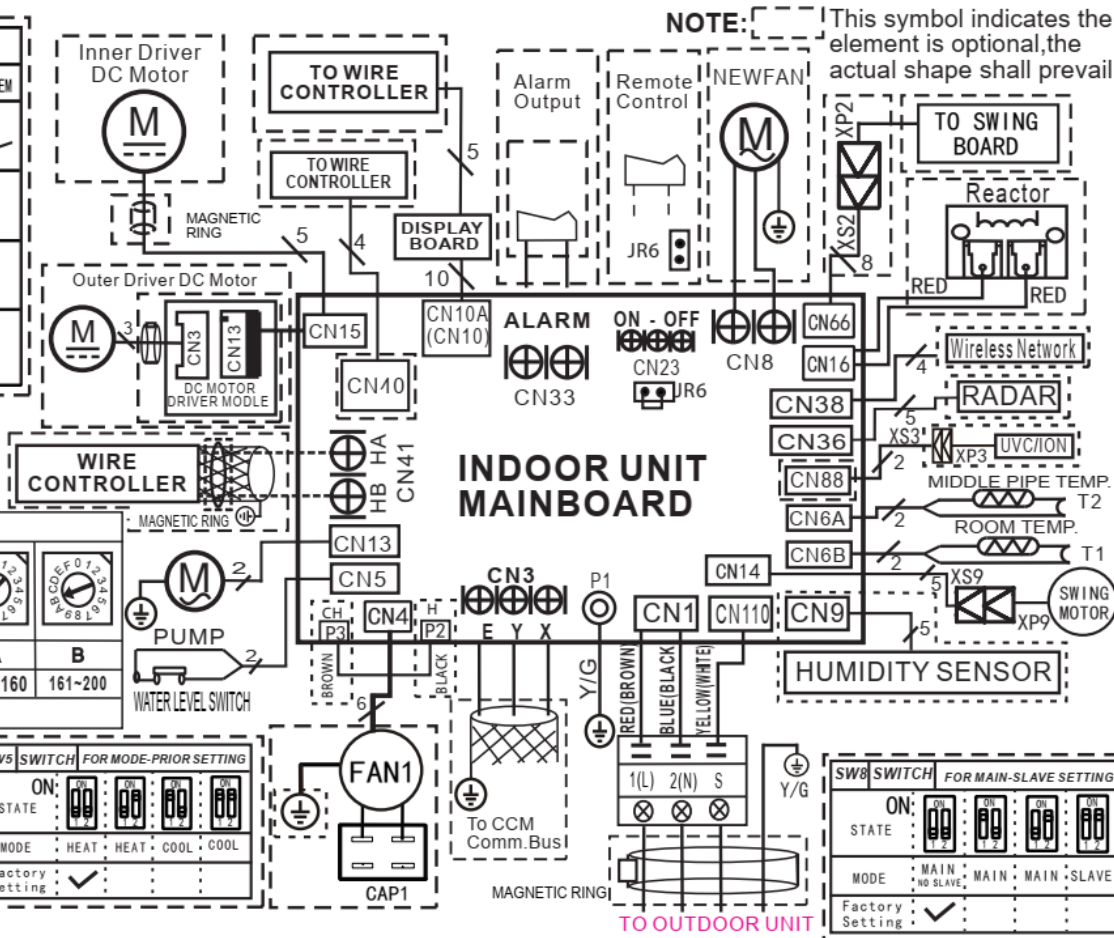


Model:
 ACI-35HRDC1C
 Wiring diagram



Notes:
 This symbol indicates the element is optional, the actual shape shall prevail.

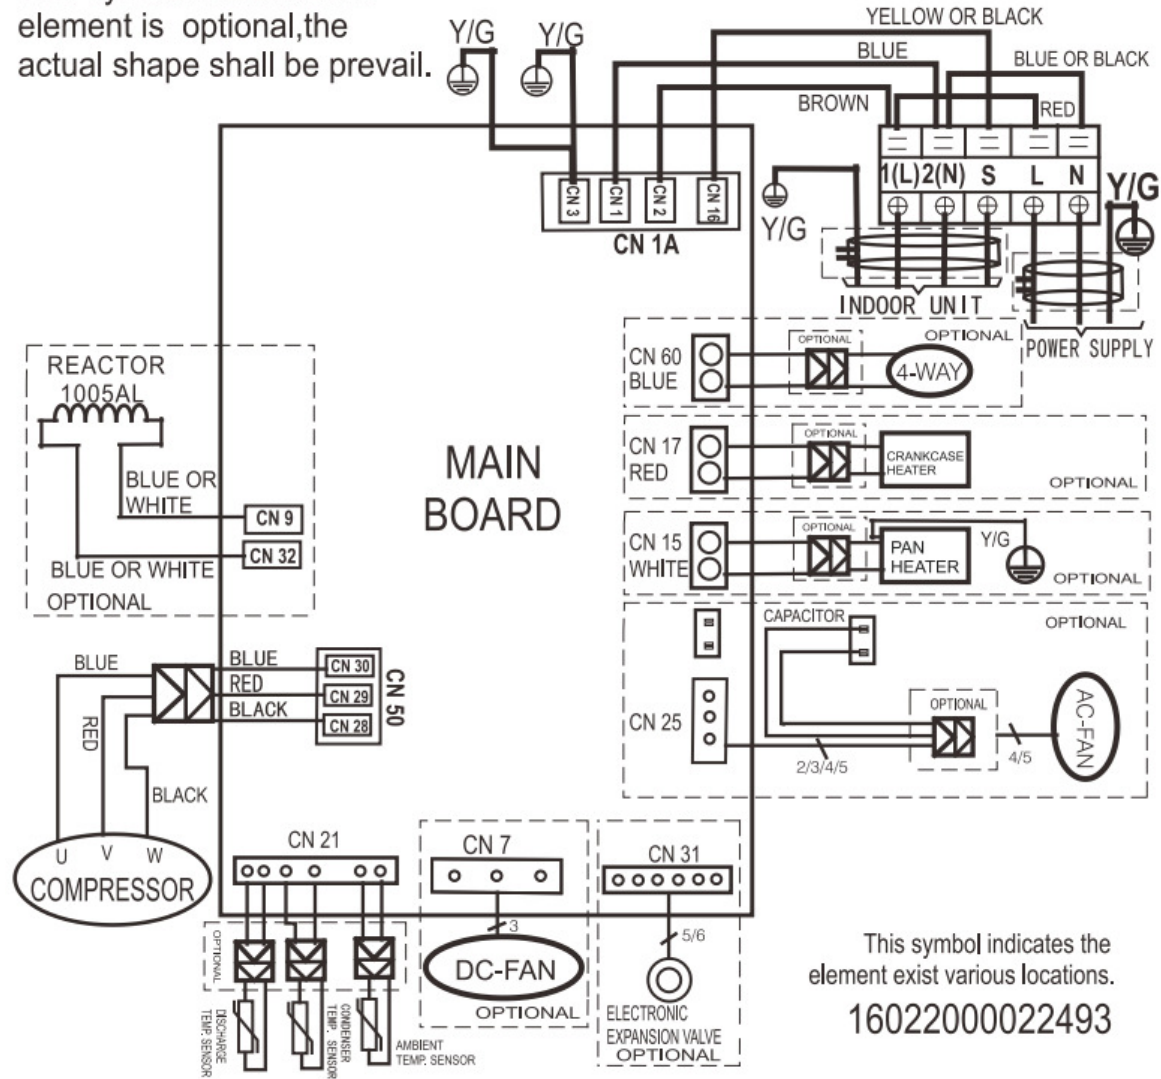

This symbol indicates the element exist various locations.
 16022000022493

Model:	
AOU-35HRDC1A	
Wiring diagram	2