

CODE:16022500006083
**WIRING DIAGRAM
 (INDOOR UNIT)**
FUNCTION OF SWITCH

SWITCH	FOR CCM UNIT ADDRESS	
S2 + S1		
ADDRESS	0~15	16~31
Factory Setting	✓	
S2 + S1		
ADDRESS	32~47	48~63
Factory Setting		✓


SW2 / SW2-1	SWITCH	FOR FAN MOTOR CONTROL THEN NO POWER REQUEST.
ON		
STATE	FAN OFF	FAN ON
MODE	FAN OFF	FAN ON
Factory Setting	✓	
SW2-2	SWITCH	BREEZELESS
ON		
STATE	BREEZE LESS OFF	BREEZE LESS ON
MODE	BREEZE LESS OFF	BREEZE LESS ON
Factory Setting	✓	

Anti-cold air	
SW1	FAN MOTOR STOP-TEM
	24 Factory setting ✓
	15
	8
	According to the EEPROM setting

FOR SETTING POWER(DC MOTOR MODEL ONLY)

ENC1									
CODE	0	1	2	4	5	7	8	9	A B
POWER	20	26	32~35	36~53	54~71	72~90	91~105	106~140	141~160 161~200
FACTORY SETTING	ACCORDING TO RELATED MODEL.								

SW3	SWITCH	FOR AUTO-RESTART SETTING		
ON				
STATE	REMEMBER	NO_REMEMBER		
MODE	REMEMBER	NO_REMEMBER		
Factory Setting	✓			
SW7	SWITCH	FOR COOLING & HEATING OR COOLING ONLY SETTING		
ON				
STATE	COOLING + HEATING	COOLING ONLY		
MODE	COOLING + HEATING	COOLING ONLY		
Factory Setting	✓			
SW6	SWITCH	FOR TEMP. COMPENSATION		
ON				
STATE	6	4	2	E function
MODE	6	4	2	E function
Factory Setting	✓			
SW5	SWITCH	FOR MODE-PRIOR SETTING		
ON				
STATE	HEAT	HEAT	COOL	COOL
MODE	HEAT	HEAT	COOL	COOL
Factory Setting	✓			
SW8	SWITCH	FOR MAIN-SLAVE SETTING		
ON				
STATE	MAIN	NO SLAVE	MAIN	SLAVE
MODE	MAIN	NO SLAVE	MAIN	SLAVE
Factory Setting	✓			

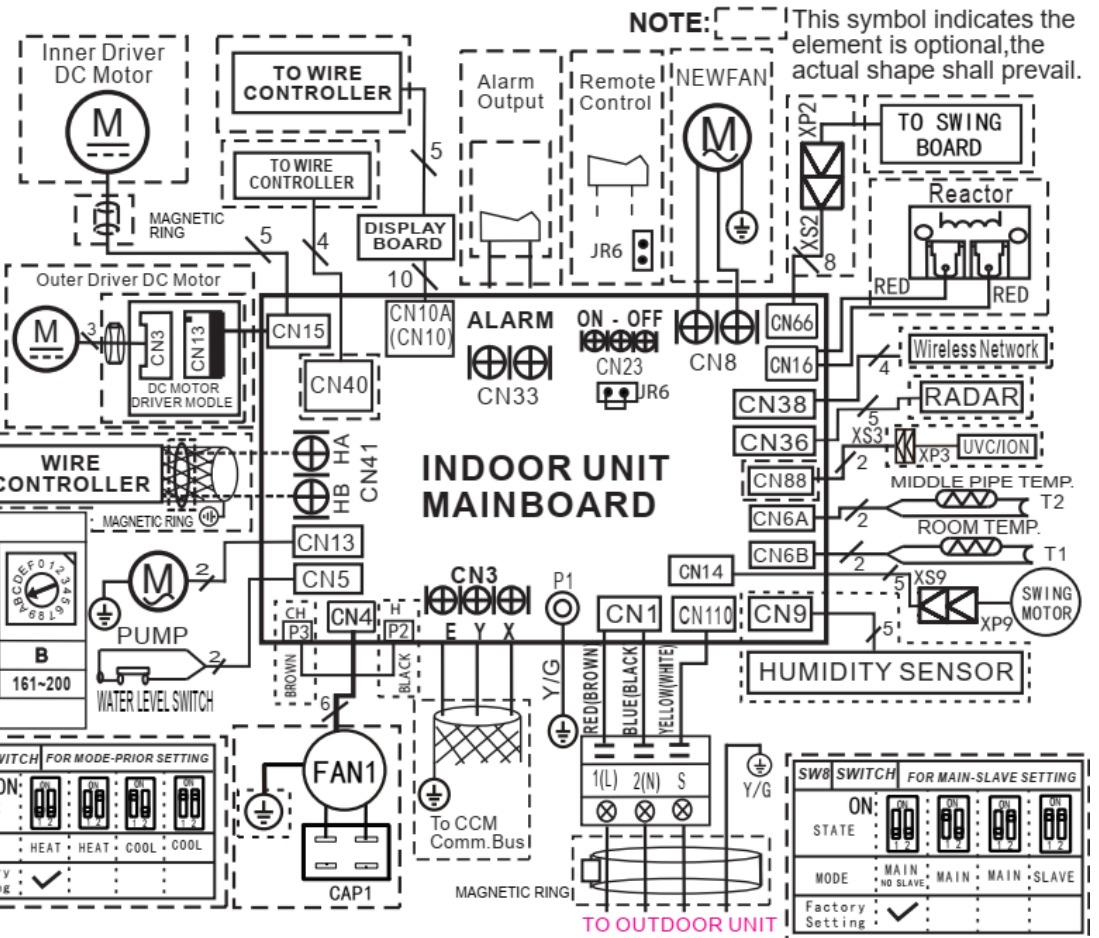



NOTE: This symbol indicates the element is optional, the actual shape shall prevail.

Model:
 ACI-53HRDC1C
 Wiring diagram



Notes:
 This symbol indicates the element is optional, the actual shape shall prevail.

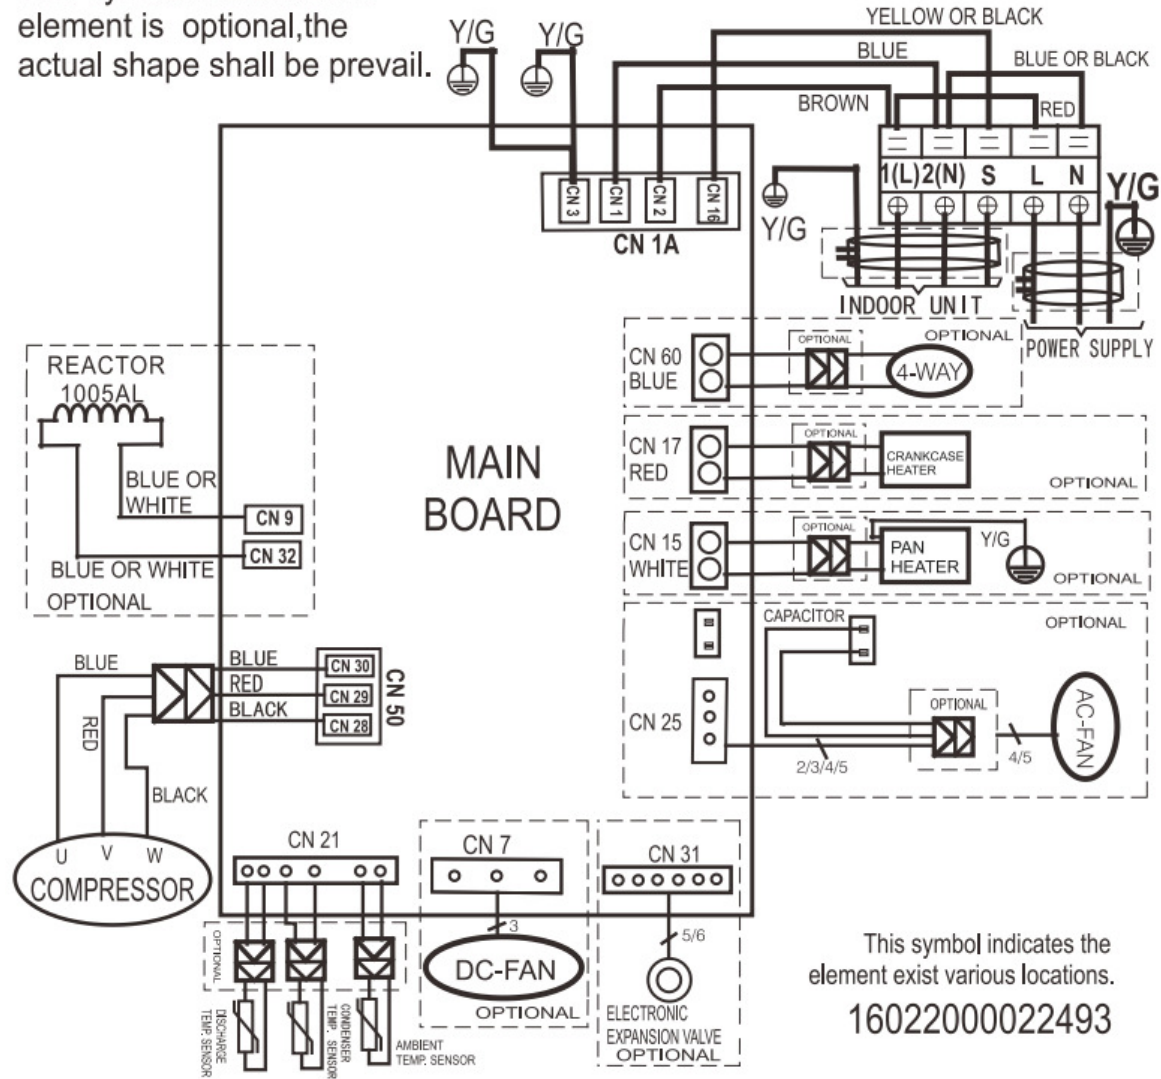

Model:		
AOU-53HRDC1A		
Wiring diagram		
		2