

16022700002948
WIRING DIAGRAM
(INDOOR UNIT)

FOR MAIN-SLAVE SETTING

SW5	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2
MODE	MAIN NO SLAVE	MAIN	MAIN	SLAVE
FACTORY SETTING	✓			

FOR ANTI-COLD WIND

SW1	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2
MODE	24°C	15°C	8°C	EEPROM DEFAULT
FACTORY SETTING	✓			

FOR SETTING FAN MOTOR CONTROL WHEN THERE IS NO DEMAND

SW2	<input type="checkbox"/> ON <input type="checkbox"/> 1	<input type="checkbox"/> ON <input type="checkbox"/> 1
MODE	FAN OFF	FAN ON
FACTORY SETTING	✓	

FOR SETTING AUTO-RESTART

SW3	<input type="checkbox"/> ON <input type="checkbox"/> 1	<input type="checkbox"/> ON <input type="checkbox"/> 1
MODE	AUTO-RESTART	NOT AUTO-RESTART
FACTORY SETTING	✓	

FOR TEMP. COMPENSATION (HEATING)


SW6	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2	<input type="checkbox"/> ON <input type="checkbox"/> 1 2
MODE	0°C	2°C	4°C	EEPROM DEFAULT
FACTORY SETTING	✓			

FOR SETTING POWER

ENC1	<input type="text" value="0"/>	<input type="text" value="1"/>	<input type="text" value="2"/>	<input type="text" value="4"/>	<input type="text" value="5"/>	<input type="text" value="7"/>	<input type="text" value="8"/>	<input type="text" value="9"/>	<input type="text" value="A"/>	<input type="text" value="B"/>
CODE	0	1	2	4	5	7	8	9	A	B
POWER	20	26	32-35	36-53	54-71	72-90	91-105	106-140	141-160	161-200
FACTORY SETTING	ACCORDING TO RELATED MODEL.									

FOR SETTING NETADDRESS

S1+S2	<input type="text" value="0~F"/>	<input type="text" value="0~F"/>	<input type="text" value="0~F"/>	<input type="text" value="0~F"/>
CODE	0~F	0~F	0~F	0~F
NETADDRESS	0~15	16~31	32~47	48~63
FACTORY SETTING	✓			

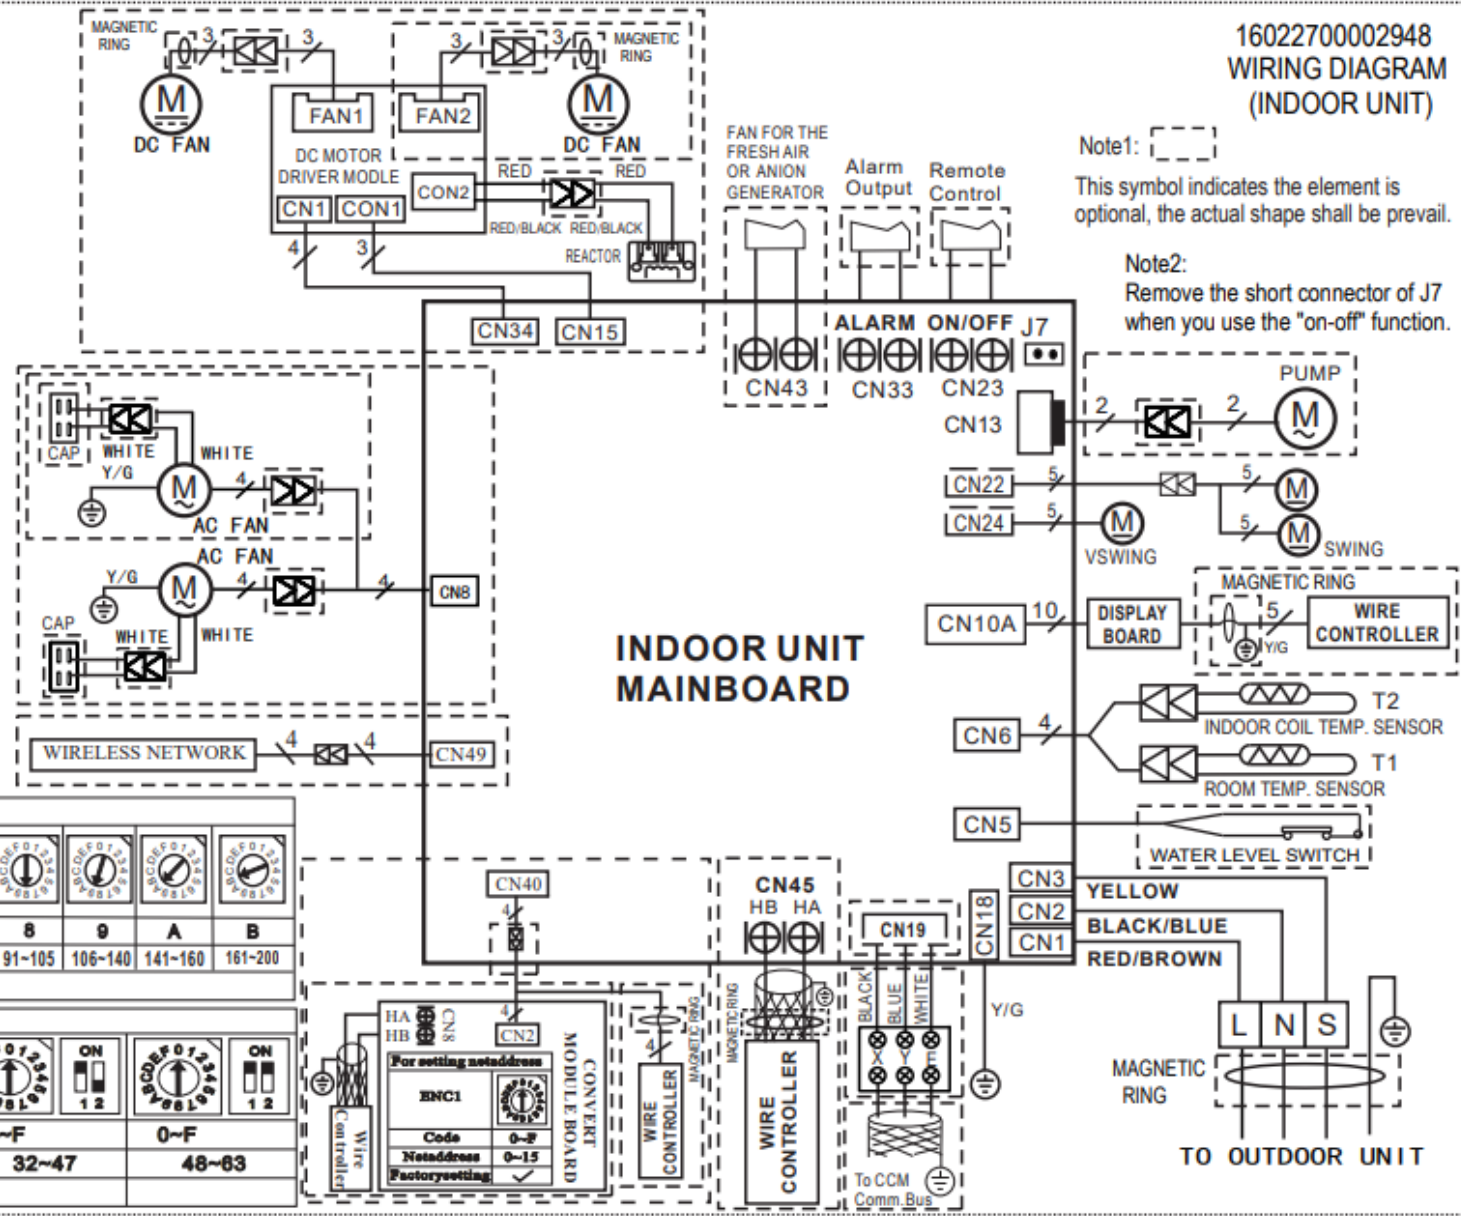

Note1: This symbol indicates the element is optional, the actual shape shall be prevail.

Note2: Remove the short connector of J7 when you use the "on-off" function.

Model: _____


AFI-71HRDC1A


Wiring diagram



2025-10-01

16022000020613

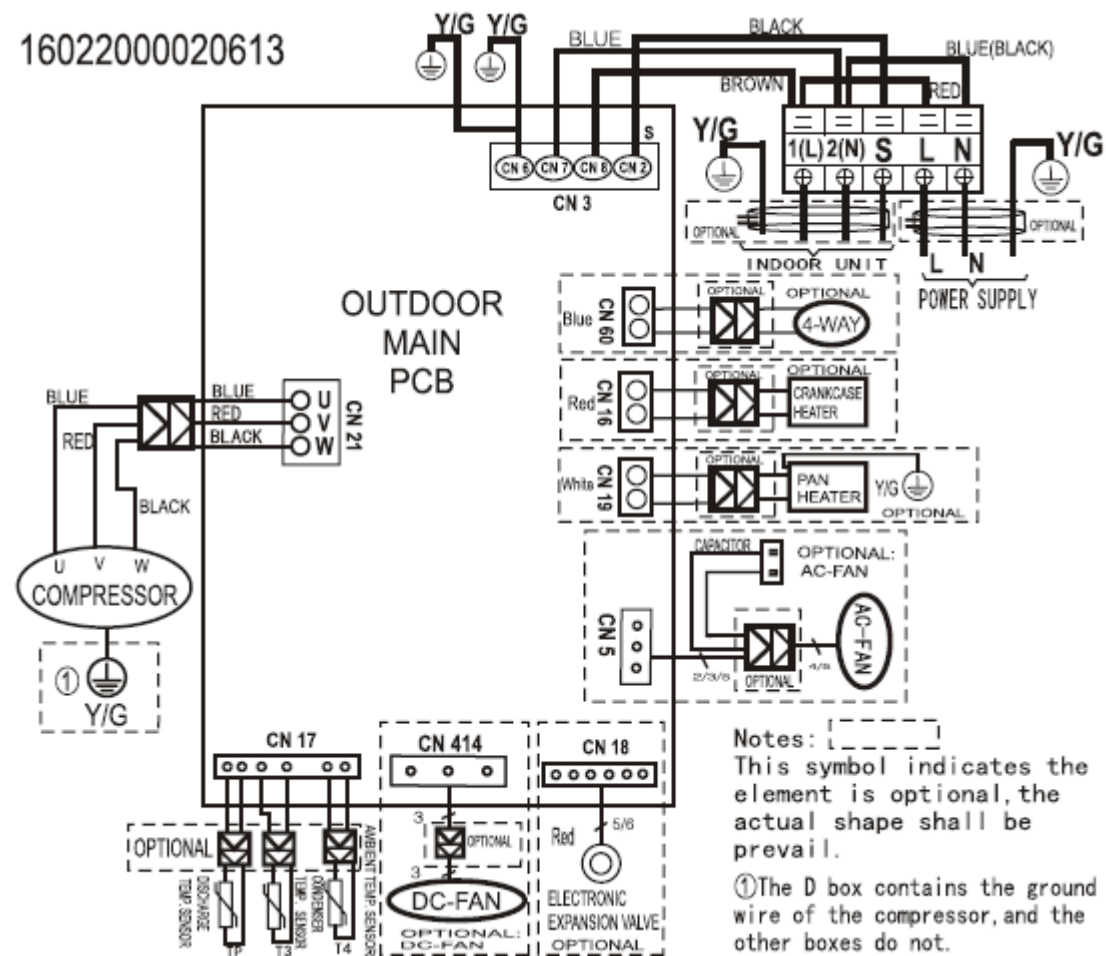

Model:		
AOU-71HRDC1C		
Wiring diagram	2025-10-01	2