

RDU341 –the room thermostat with KNX communications allows you to set the ideal room temperature. The thermostat provides Comfort, Energy Saving, and Protection modes and can operate in Auto timer mode using a schedule provided via bus.

You can either take advantage of the thermostat's factory settings or adjust it as needed.

Display

- Protection mode
- Auto Timer mode
- Comfort mode **
- Energy Saving mode **

Measured room temperature, setpoints and parameters


Current time of day or additional user information

- Actual room temperature
- Outdoor temperature
- Fault indicator *

- Condensation in the room *
- Cooling demand / mode
- Heating demand / mode
- Electrical heater active
- Extended Comfort mode *

Buttons are locked


Weekday 1...7
(1 = Monday / 7 = Sunday)

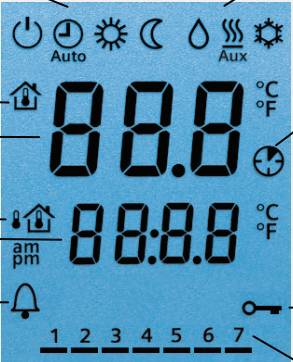

Operation and settings

Operating mode button

- Protection mode
- Auto Timer mode
- Comfort mode **
- Energy saving mode **



Colder / Warmer

Notes:

- The thermostat goes back to Auto Timer mode if a time schedule via bus changes the operating mode.
- User operations are ignored if a time schedule via bus sets the operating mode to protection. When you press a button, "OFF" flashes on the LCD.
- Auto mode is not available if there is no time schedule via bus.

* Needs to be configured by your HVAC installer
 ** Needs to be enabled via parameter P02

Change room temperature

+ / – Press + or – to increase or decrease the current room temperature setpoint for **Comfort mode**. The thermostat changes to Comfort . The setting range is 5...40 °C, unless limited by parameters P09 and P10.

Change thermostat operating mode

Press operating mode button to change the operating mode display.

In protection mode, the plant stops operating. However, if the room temperature drops below 8 °C, heating is switched on to protect the room against frost. Your HVAC installer can change the frost protection limit and set a heat protection limit as needed:
Changes made by installer: Frost protection: °C
 Heat protection: °C

In Comfort mode, the thermostat maintains the room temperature on the setpoint which can be readjusted using the + and – buttons.

In Energy Saving mode, the room temperature is maintained at a lower or higher setpoint, thus saving energy and money. The thermostat can be set to Energy Saving mode *either* by pressing the operating mode button if enabled (P02 = 2), *or* via an external signal (switch or KNX bus command) such as window contact, keycard or presence detector.

The energy saving setpoints are factory-set to 15 °C for heating and 30 °C for cooling. Use parameters P11 and P12 to adjust the values.

Important: These setpoints can be set to **OFF**; which means that the thermostat is not active., i.e. no protective heating or cooling function.

Risk of frost!

In Auto timer mode, the thermostat automatically switches between Comfort and Energy Saving mode according to the scheduler via KNX bus.

Change from heating to cooling mode




Changeover between cooling and heating is either *automatic* using a heating / cooling changeover sensor or a remote changeover switch or via instruction from the central management station via KNX bus, *or manual* by pressing operating mode button . No changeover is possible if the thermostat is configured for *cooling only* or *heating only*, (see parameter P01).

Display for automatic changeover or heating only / cooling only:



Heating valve is open
 Cooling valve is open

Display for manual changeover:
 Thermostat is in heating mode
 Thermostat is in cooling mode







Temporary timer to extend the Comfort mode

When Energy Saving operating mode is active, press operating mode button  to temporarily return to Comfort mode.  symbol appears. Press operating mode button  again to stop the timer.
You can only extend Comfort mode if parameter P02 = 1.
Duration * : P68 = 0...360 min, factory setting = 0 min.

Button lock

Press operating mode button  for 5 seconds to lock or unlock the buttons if manual button lock is configured (parameter P14 = 2).
The thermostat automatically locks the buttons 20 seconds after the last adjustment if "Auto lock" is configured (P14 = 1).
The key symbol  indicates locked buttons.

External faults

 AL1 * These messages inform you on external faults *:
 AL2 *  AL1 :   AL2 : 

Commissioning


You can adjust a number of different control parameters to adapt the thermostat to your system and optimize control performance. You can do this during operation either via the buttons on the thermostat or using a commissioning tool.

Control parameters



Proceed as follows to change the most important control parameters:
(Your HVAC installer can set additional parameters)

+ / -

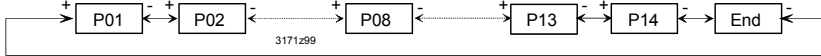1. Press the - and + buttons simultaneously at least 3 seconds. Release, and within 2 seconds, press + again for 3 seconds. "P01" is displayed.
2. Repeatedly press the + or - button to select the required parameter.




3. Press + and - simultaneously. The current value of the selected parameter begins to flash, allowing you to change the value by repeatedly pressing + or -.
4. The next parameter is displayed when you press + and - again simultaneously.
5. Repeat steps 2 to 4 to display and change additional parameters.
6. Press + or - until "End" is displayed, and then press + and - simultaneously to save the change and exit parameter entry mode.

Parameter	Description	Factory setting	Setting range	Adj 
P01	Control sequence	1 (Cooling only)	0 = Heating only 1 = Cooling only 2 = Manual H or C 3 = Auto Changeover	
P02	Mode selection by user via operating mode button ** Without time schedule via KNX, Auto is equal to Comfort.	1 (Auto **, Protection)	1 = Auto **, Protection 2 = Auto **, Comfort, Energy Saving, Protection	
P04	Selection of °C or °F	°C	0 = °C 1 = °F	
P05	Sensor calibration	0.0 °C	-3 ... +3 °C	
P06	Standard temperature display	0 (Room temp.)	0 = Room temperature 1 = Setpoint	
P07	Additional user information	0 (no display)	0 = No display 1 = Temp. in °C / °F 2 = Outside temperature (via bus) 3 = Time of day (12h, via bus) 4 = Time of day (24h, via bus)	
P08	Comfort basic setpoint	21 °C	5 ... 40 °C	
P09	Minimum setpoint limitation in Comfort (Wmin _{Comf})	5 °C	5 ... 40 °C	
P10	Maximum setpoint limitation in Comfort (Wmax _{Comf})	35 °C	5 ... 40 °C	
P11	Setpoint of heating in Energy Saving (Wheat _{Eco})	15 °C	OFF, 5 °C...Wcool _{Eco}	
P12	Setpoint of cooling in Energy Saving (Wcool _{Eco})	30 °C	OFF, Wheat _{Eco} ...40°C	
P14	Button lock (Press operating mode button  for 5 seconds to lock or unlock the buttons)	0 (Disabled)	0 = Disabled 1 = Auto lock 2 = Manual lock	

* Needs to be configured by your HVAC installer

All temperature settings can be made in increments of 0.5 °C.

 Please record all changes you make!